


SECTION 6 - THE BATTERY

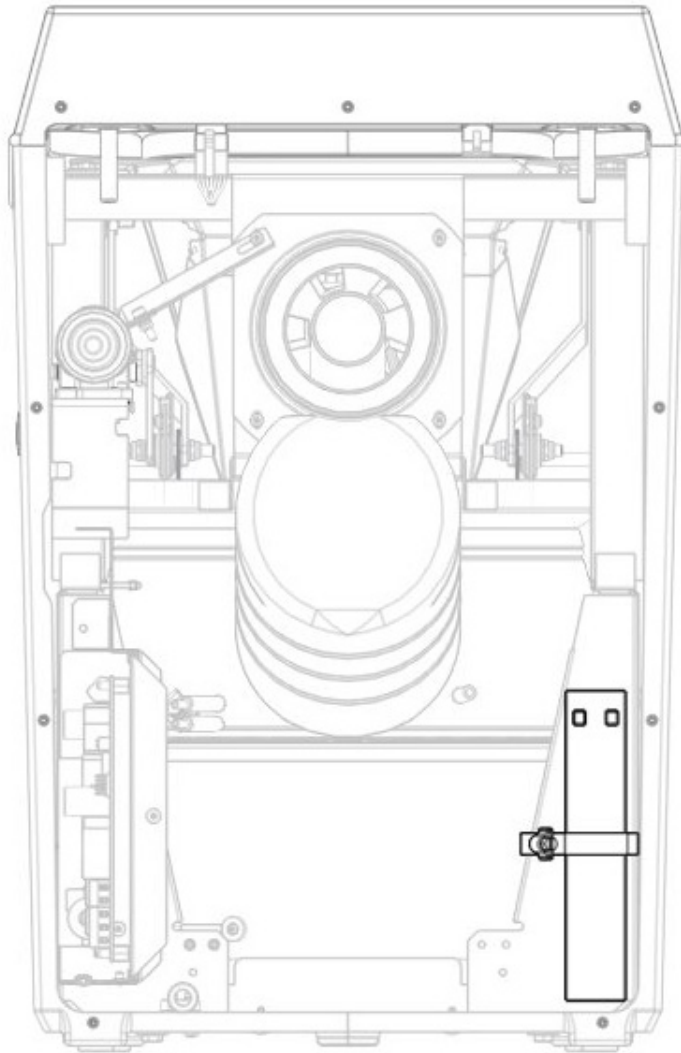


SECTION 1.1 - DISMOUNTING THE REAR PANEL


Step 1: Always start with disconnect the mains power cable before performing any service on the toilet.




Step 2: Unscrew the rear panel with a Torx Size T10 screwdriver

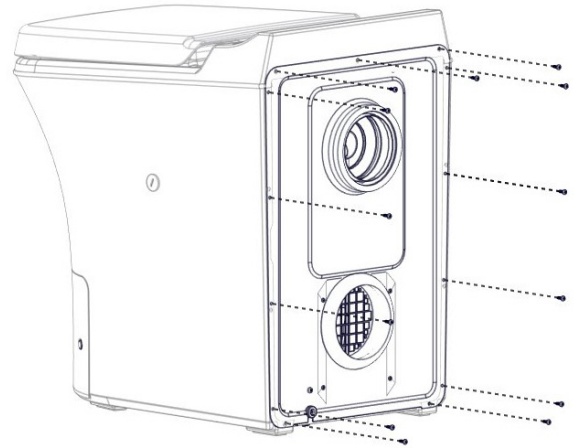

Step 3: Disconnect the earth lead removing it from its clip on the circuit board bracket.

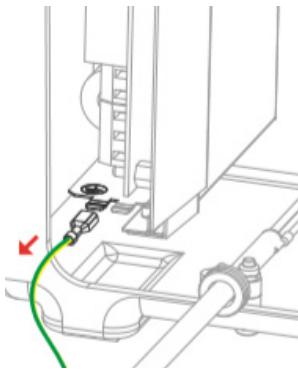

Step 4: Remove the rear panel

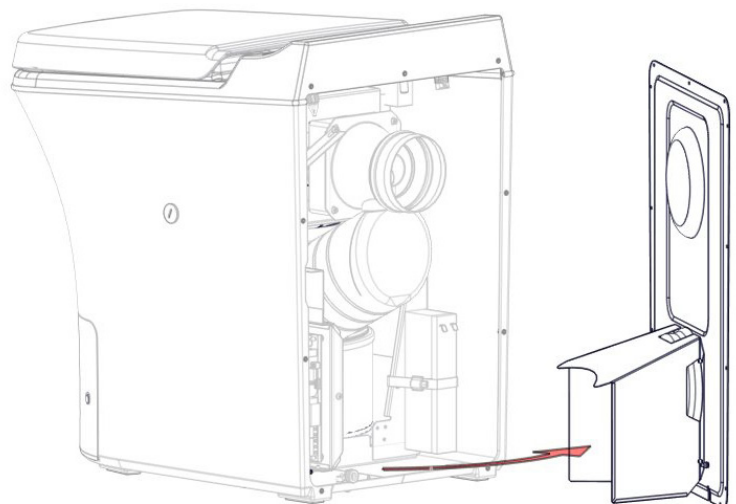

SECTION 6.1 - DISMOUNTING THE BATTERY


Step 1: Always start with disconnect the mains power cable before performing any service on the toilet.




Step 2: Remove the rear panel by following **section 1.1**.



Step 3: Disconnect both power leads from the battery

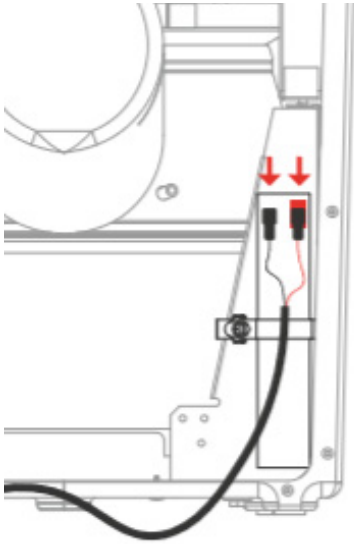


Step 4: Loosen the battery hose clip with the help of screw driver or a 7mm wrench. Lift the battery upwards to remove it.

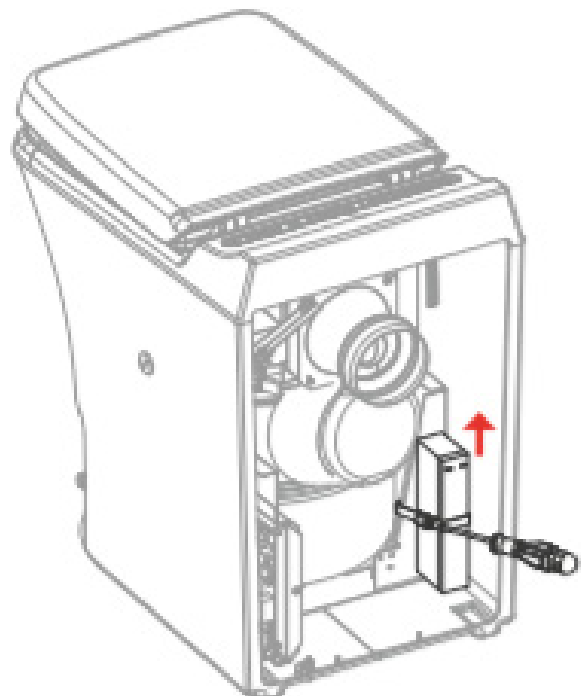


SECTION 6.2 - INSTALLING THE BATTERY

Step 1: Place the new battery in position

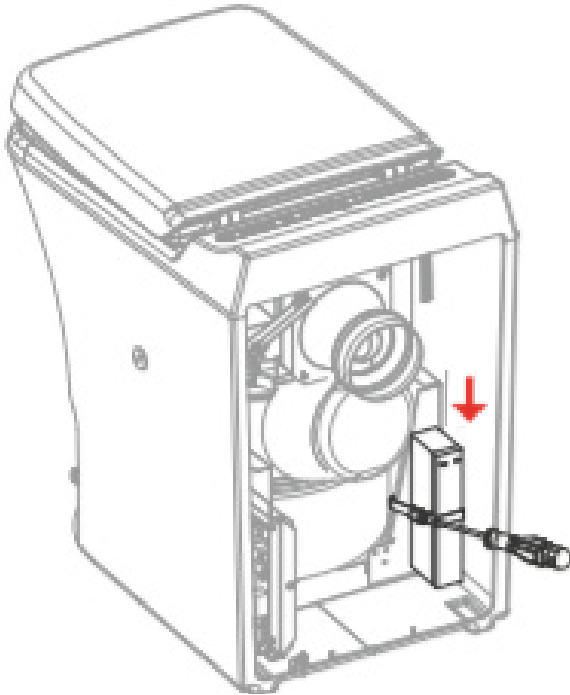

Step 2: Tighten the battery hose clip and reconnect the power leads. Make sure to connect the leads correctly. E.g. (Red to red, black to black.)

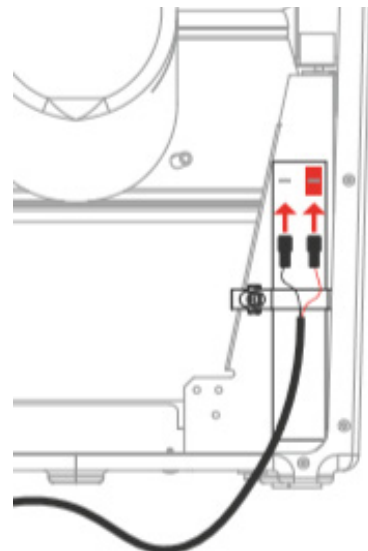


Step 3: Replace the rear panel by following **section 1.2.**




SECTION 1.2 - INSTALLING THE REAR PANEL

Step 1: Reconnect the earth lead to the circuit board bracket

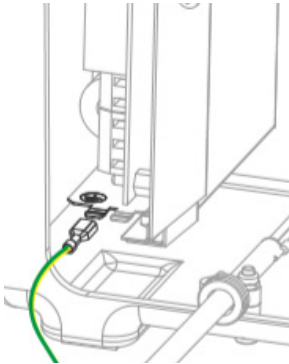

Step 2: Replace the rear panel into its original position, ensure that the protective grommet on the mains cable is firmly placed in its designated spot on the bottom of the rear panel

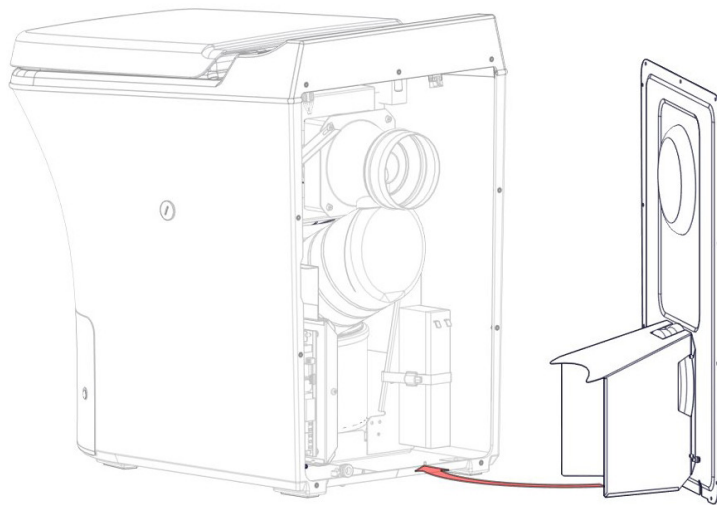

Step 3: Reattach all screws and ensure that the fan venturi is aligned with the centre of the vent opening located in the rear cover.

